



PART NO. DESCRIPTION

6605B-2-1	Saddle
6605B-12-0	Handle Assy.
6605B-1-4-7	Wheel Assy.
6605B-4-0	Castor Assembly
6605B-11-1	Cam Step
6605B-11-14	Spring
6605B-CYL	Hydraulic Cylinder (complete)
6605B-5K	Seal Kit

PART NO.	DESCRIPTION
RS6605B21	Saddle
RS6605B120	Handle Assy.
RS6605B147	Wheel Assy.
RS6605B40	Castor Assembly
RS6605B111	Cam Step
RS6605B1114	Spring
RS6605BCYL	Hydraulic Cylinder (complete)
RS6605BSK	Seal Kit

INSPECTION

Visual inspection should be made before each use of the service jack, checking for leaking hydraulic fluid and damaged, loose or missing parts. Each jack must be inspected by a manufacturer's repair facility immediately, if accidentally subjected to an abnormal load or shock. Any jack which appears to be damaged in any way, is found to be badly worn, or operates abnormally **MUST BE REMOVED FROM SERVICE** until necessary repairs are made by a manufacturer's authorized repair facility. It is recommended that an annual inspection of the jack be made by a manufacturer's authorized repair facility and that any defective parts, decals or warning labels be replaced with manufacturer's specified parts. A list of authorized repair facilities is available from the manufacturer.

OWNER/USER RESPONSIBILITY

The owner and/or user must have an understanding of the manufacturer's operating instructions and warnings before using the Service Jack. Personnel involved in the use and operation of equipment shall be careful, competent, trained, and qualified in the safe operation of the equipment and its proper use when servicing motor vehicles and their components. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturer's instructions and pertinent warning information. Owner and/or user is responsible for keeping all warning labels and instruction manuals legible and intact. Replacement labels and literature are available from the manufacturer.

MAINTENANCE

All moving joints require lubrication often. Remove handle and grease the lower end of handle where it strikes the release mechanism. Using a grease gun, grease the lift arm pivot shaft grease fitting until grease appears at the end of the shaft. Oil all lift arm linkages, front wheels and rear casters.

