



REF. NO.	PART NO.	DESCRIPTION	QTY.
1A	85801A	Piston Assembly	1
2	85802	Damping Ring	1
6	85806	Rubber Washer	1
7	85807	Piston Valve	1
8	85808	Washer	1
9	85809	Screw	1
10	85810	Saw Holder	1
11	85811	Screw	3
12	85812	Spring	1
13	85813	Handle	2
14	85814	Screw	1
15	85815	Screw	1
16	85816	Protective Cover	2
17	85817	Spring Pin	2
18	85818	Bushing	1
19	85819	Cylinder	2
20	85820	Valve Box	1
21	85821	Bushing	1
22	85822	Valve Liner	1
23	85823	Guide Frame	1
25	85825	Bottom Board	1
26	85826	Guide Plate	1
27	85827	Guide Block	2
28	85828	Guide Plate	1
29	85829	Screw	1
30	85830	Gasket	1
31	85831	Air Valve Body	1
32	85832	Valve Plug	1
33	85833	O-Ring	1
34	85834	Adjusting Valve	1
35	85835	O-Ring	1
36	85836	Spring	1
37	85837	Valve Rod	1
38	85838	O-Ring	1
39	85839	Valve Rod Sleeve	1
40	85840	Screw	4
41	85841	Spring Washer	4
42	85842	Air Inlet	1
44	85844	Trigger Assembly	1
45	85845	Spring Pin	1

REPLACEMENT BLADES:

RS87620 5 pack
 (3-32TPI, 2-24TPI)