



PARTS LIST

6-800

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	50501	Housing Motor	1
2	50502	Reverse Valve Bushing	1
3	50503	Reverse Valve (incl. # 14)	1
4	50504	Trigger	1
5	50505	Pin	2
6	50506	Throttle Valve Bushing	1
7	50507	Throttle Pin	1
8	50508	O-Ring	1
9	50509	Throttle Spring	1
10	50510	Hose Adaptor	1
11	50511	O-Ring	1
12	50512	Air Screen	1
13	50513	O-Ring Retainer	1
14	50514	Reverse Lever (incl. with # 3)	1
15	50515	Roll Pin	1
16	50516	Flange Bushing	1
17	50517	Anvil Bushing	1
19	50519	Hammer Cage	1
20	50520	Hammer Pin	2
21	50521	Hammer Dog	2
22	50522	Drive Cam	1
23	50523	Cylinder Pin	1
24	50524	Cylinder	1
25	50525	Rotor	1
26	50526	Rotor Blade	6
27	50527	Front End Plate	1
28	50528	Ball Bearing	2
29	50529	Rear End Plate	1
30	50530	Spacer	1
31	50531	Gasket	1
32	50532	Clutch Housing	1
33	50533	Gasket	1
34	50534	Pistol Grip Handle	1
35	50535	Lock Washer	4
36	50536	Cap Screw	4
37	50537	Lock Washer	4
38	50538	Cap Screw	4
39	50539	Exhaust Deflector	1
40	50540	Screw	4
41	79441	Dead Handle	1
42	50542	Dead Handle Bolt	1
43	50543	Oil Seal	1
44	50544	Washer	1
45	50545	Screw	1
46	50546	O-Ring	1
47	50547	Anvil Collar	1
48	50548	O-Ring	1
54	80054	#5 Spline Anvil - Extended	1 NLA
	RS52518	Anvil (extended)	optional
	RS29578	Anvil (standard)	optional

PLEASE REVIEW ALL WARNING INSTRUCTIONS PRIOR TO OPERATION. SAVE THIS MANUAL FOR FUTURE REFERENCE.