


PARTS BREAKDOWN

6-866

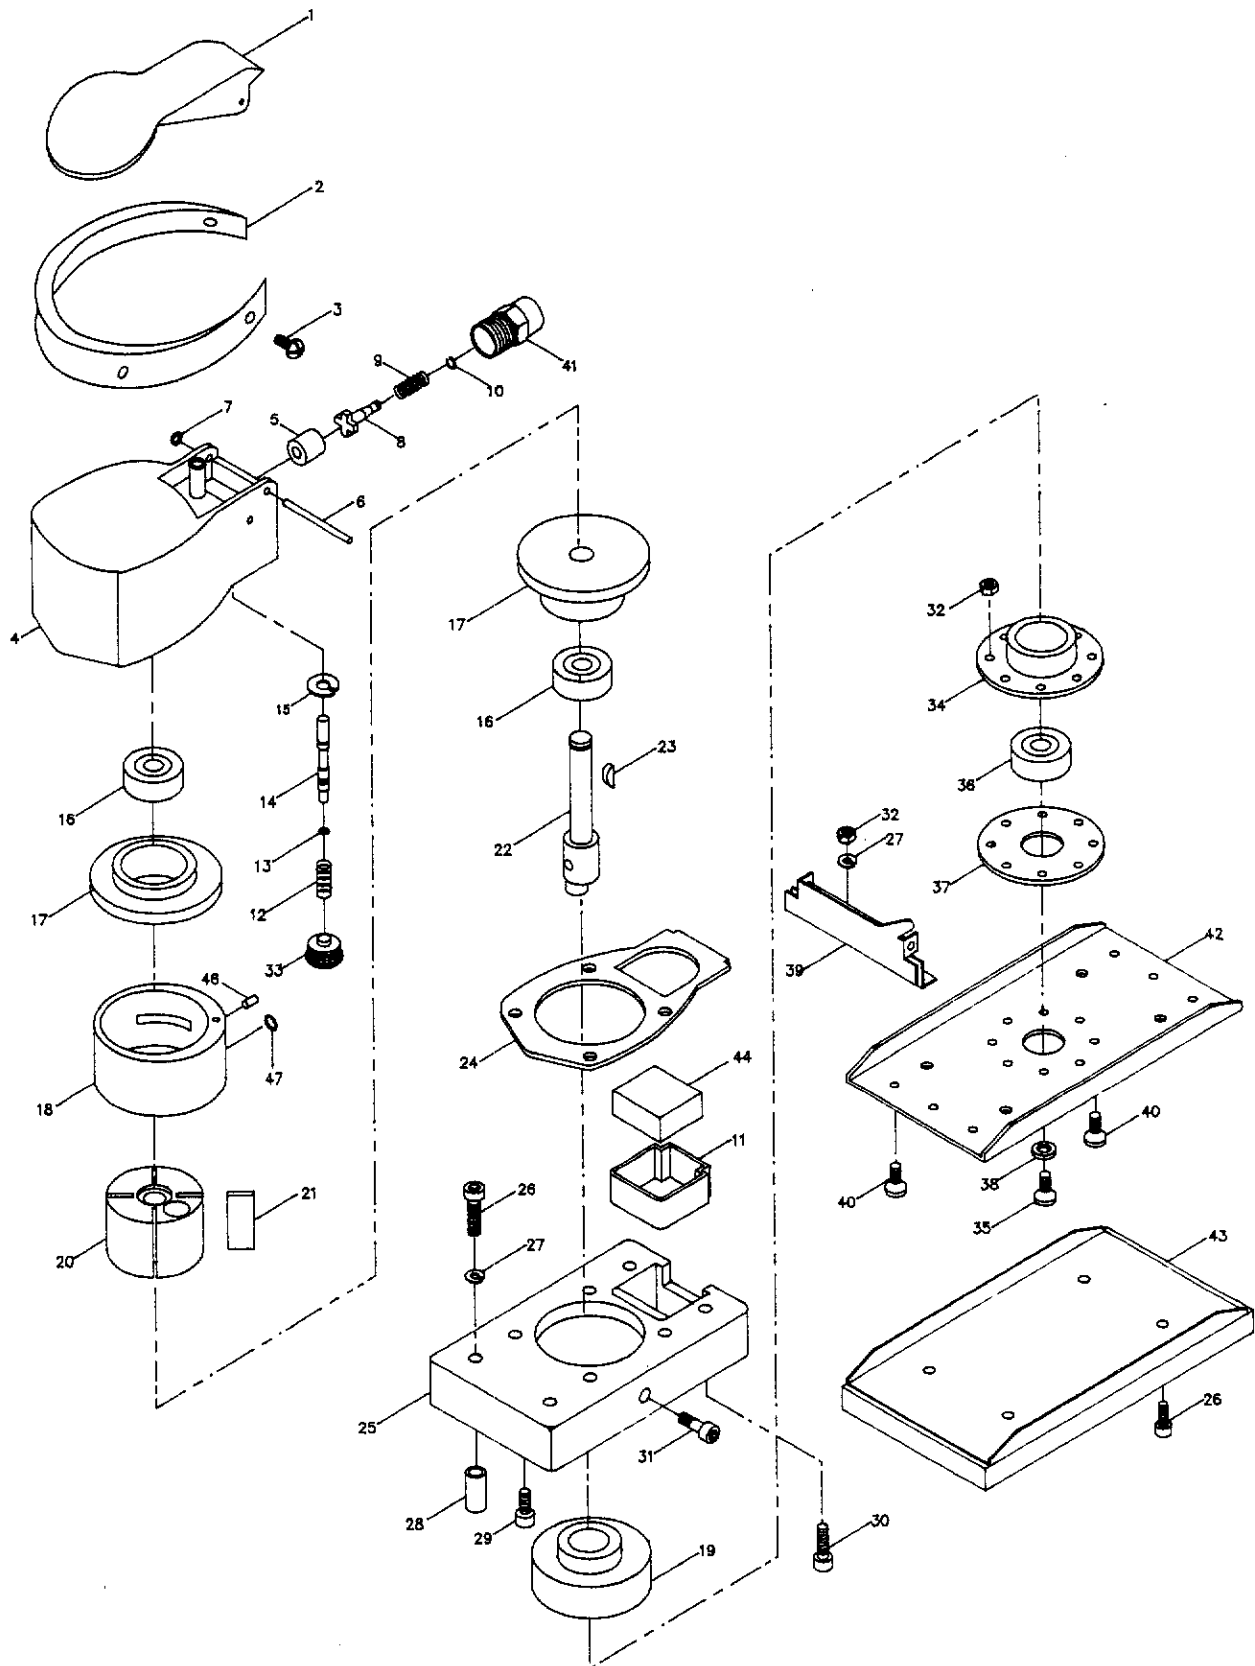

PARTS LIST

6-866

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	86601	Lever	1
2	86602	Rubber Grip with Metal Strip	1
3	86603	Grip Screw	4
4	86604	Body	1
5	86605	Res. Bushing	1
6	86606	Lever Pin	1
7	86607	Lever Retainer	1
8	86608	Res. Valve	1
9	86609	O-Ring Res. Spring	1
10	86610	Ret. Ring	1
11	86611	Muffler	1
12	86612	Spring	1
13	86613	O-Ring	1
14	86614	Plunger	1
14P	86614P	O-Ring	1
15	86615	Retaining Ring	1
16	29120	Ball Bearing	2
17	86617	End Plate	2
18	86618	Cylinder w/Locking Pin	1
19	86619	Balance	1
20	86620	Rotor	1
21	86621	Rotor Blade	4
22	86622	Rotor Shaft	1
23	86623	Key	1
24	86624	Gasket	1
25	86625	Base	1
26	86626	Mount Screw	8
27	86627	Spring Washer	10
28	86628	Rubber Post	4
29	86629	Cap Screw	2
30	86630	Cap Screw	2
31	86631	Balancer Lock Screw	1
32	86632	Nut	12
33	86633	Plug	1
33P	86633P	O-Ring	1
34	86634	Bearing Housing	1
35	86635	Screw	1
36	29120	Ball Bearing	1
37	86637	Bearing Plate	1
38	86638	Washer	1
39	86639	Paper Clamp	2
40	86640	Screw	12
41	86641	Inlet	1
42	86642	Shoe Plate	1
43	86643	Sanding Pad	1
44	86644	Muffler Element	1
46	86646	Spring Pin	1
47	86647	O-Ring	1