



ASSEMBLY INSTRUCTIONS

7704
Fuel Tank Adapter for
Transmission Jack

ASSEMBLY INSTRUCTIONS:

1. Attach the fuel tank adapter saddle to the transmission saddle using two 7/16" x 1" bolts, two flat washers, and a nut for each bolt. The bolts should be inserted on opposite sides of the saddle. Make sure the fuel tank adapter is fastened securely to the transmission jack adapter.
2. Adjust the four support risers to the size of the fuel tank. Once you have the risers in the correct position, secure them in place by using the wing screws provided.
3. Once you have the fuel tank removed from the vehicle, strap the fuel tank to the adapter (before transporting the fuel tank to its destination) using the tie downs provided.

INSPECTION:

Visual inspection should be made before each use of the transmission jack with adapter, checking for leaking hydraulic fluid and damaged, loose or missing parts. Each jack must be inspected by a manufacturer's repair facility immediately, if accidentally subjected to an abnormal load or shock. Any jack which appears to be damaged in any way, found to be badly worn, or operates abnormally **MUST BE REMOVED FROM SERVICE** until necessary repairs are made by a manufacturer's authorized repair facility. It is recommended that an annual inspection of the jack be made by a manufacturer's authorized repair facility and that any defective parts be replaced with manufacturer's specified parts.

A list of authorized repair facilities is available from the manufacturer.

Replacement straps are available for purchase as part # RS7704STRAP (1 strap).

!WARNING

1. THIS IS A LIFTING DEVICE ONLY. DO NOT MOVE OR DOLLY THE VEHICLE WHILE ON THE JACK. IMMEDIATELY AFTER LIFTING SUPPORT, THE VEHICLE WITH APPROPRIATE MEANS.
2. THE USE OF A TRANSMISSION JACK WITH THIS FUEL TANK ADAPTER IS LIMITED TO THE REMOVAL, INSTALLATION, AND TRANSPORTATION IN THE LOWER POSITION, OF FUEL TANKS.
3. DO NOT OVERLOAD. OVERLOADING CAN CAUSE DAMAGE TO OR FAILURE OF THE JACK AND/OR ADAPTER.
4. LIFT ONLY ON AREAS OF THE VEHICLE AS SPECIFIED BY THE VEHICLE MANUFACTURER.
5. THIS JACK IS DESIGNED FOR USE ONLY ON HARD LEVEL SURFACES CAPABLE OF SUSTAINING THE LOAD. USE ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN JACK INSTABILITY AND POSSIBLE LOSS OF LOAD.
6. NO ALTERATIONS TO THE JACK AND/OR ADAPTER SHALL BE MADE.
7. READ, STUDY AND UNDERSTAND THE INSTRUCTION MANUAL BEFORE OPERATING JACK AND/OR ADAPTER.
8. FAILURE TO HEED THESE WARNINGS MAY RESULT IN LOSS OF LOAD, DAMAGE TO THE JACK AND/OR ADAPTER, AND FAILURE RESULTING IN PROPERTY DAMAGE, PERSONAL OR FATAL INJURY.

OWNER/USER RESPONSIBILITY:

The owner and/or user must have A thorough understanding of the manufacturer's operating instructions and warnings before using this adapter with a transmission jack. Personnel involved in the use and operation of equipment shall be careful, competent, trained, and qualified in the safe operation of the equipment and its proper use when servicing motor vehicles and their components. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturer's instructions. Owner and/or user is responsible for keeping all warning labels and instruction manuals legible and intact. Replacement literature is available from the manufacturer.

LIMITED WARRANTY:

SUNEX INTERNATIONAL, INC. WARRANTS TO ITS CUSTOMERS THAT THE COMPANY'S SUNEX TOOLS® BRANDED PRODUCTS ARE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIALS.

Sunex International, Inc. will repair or replace its Sunex Tools® branded products which fail to give satisfactory service due to defective workmanship or materials, based upon the terms and conditions of the following described warranty plans attributed to that specific product.

This product carries a ONE-YEAR warranty. During this warranty period, Sunex Tools will repair or replace at our option any part or unit which proves to be defective in material or workmanship.

Other important warranty information...

This warranty does not cover damage to equipment or tools arising from alteration, abuse, misuse, damage and does not cover any repairs or replacement made by anyone other than Sunex Tools or its authorized warranty service centers.

The foregoing obligation is Sunex Tools' sole liability under this or any implied warranty and under no circumstances shall we be liable for any incidental or consequential damages.

Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Return equipment or parts to Sunex Tools, transportation prepaid. Be certain to include your name and address, evidence of the purchase date, and description of the suspected defect.

If you have any questions about warranty service, please write to Sunex Tools. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Repair kits and replacement parts are available for many of Sunex Tools products regardless of whether or not the product is still covered by a warranty plan.

SHIPPING ADDRESS:

Sunex Tools
315 Hawkins Rd.
Travelers Rest, South Carolina 29690

MAILING ADDRESS:

Sunex Tools
P.O. Box 4215
Greenville, South Carolina 29608