


RS78130001
Seal Remover
& Installer

NTE 78-1310
Tri-Tip Clutch
Holding Tool



RS78130010
O-Ring
Installation
Guide


NTE 78-3203
Ceramic Seal
Installer

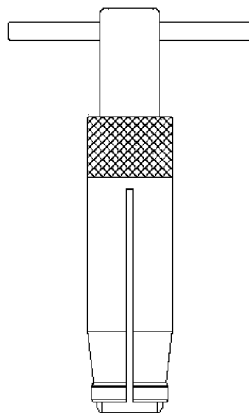


RS78130602
Clutch Plate
Remover Arbor



 NTE 78-1316
Clutch Plate Remover
(Coarse Thread)




RS78130007
Clutch Plate
Installer

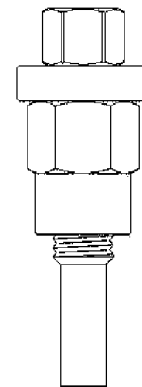


RS78130004
O-Ring Seal
Sleeve Remover

RS78130011
Seal Protector

RS78130002
Seal Seat
Installer

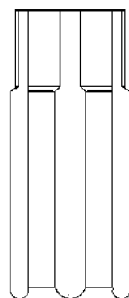

RS78130003
Internal Snap
Ring Pliers

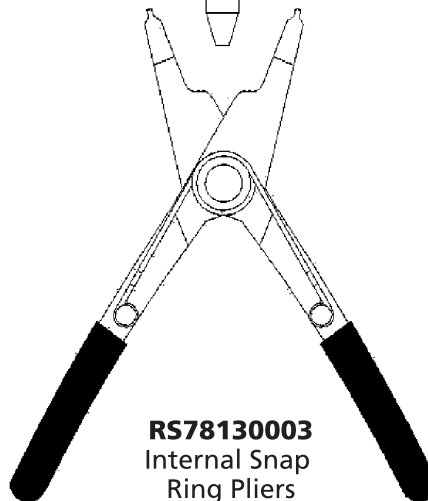

RS78130005
Seal Seat
Remover

