




RS78130201
Seal Seat Installer

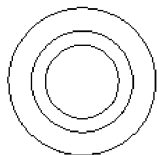


RS78130202
O-Ring Installation
Guide

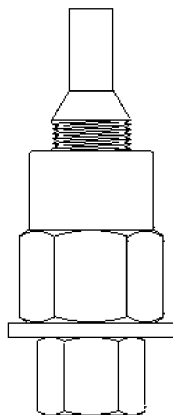

NTE 78-3208
Clutch Plate
Installer

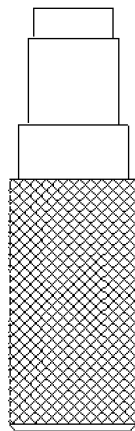

RS78130204
Seal Seat
Remover

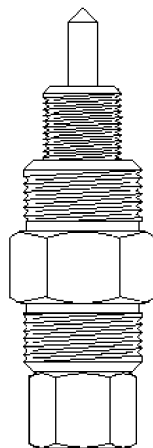

NTE 78-1317
Clutch Plate
Remover