


PARTS BREAKDOWN

6-762

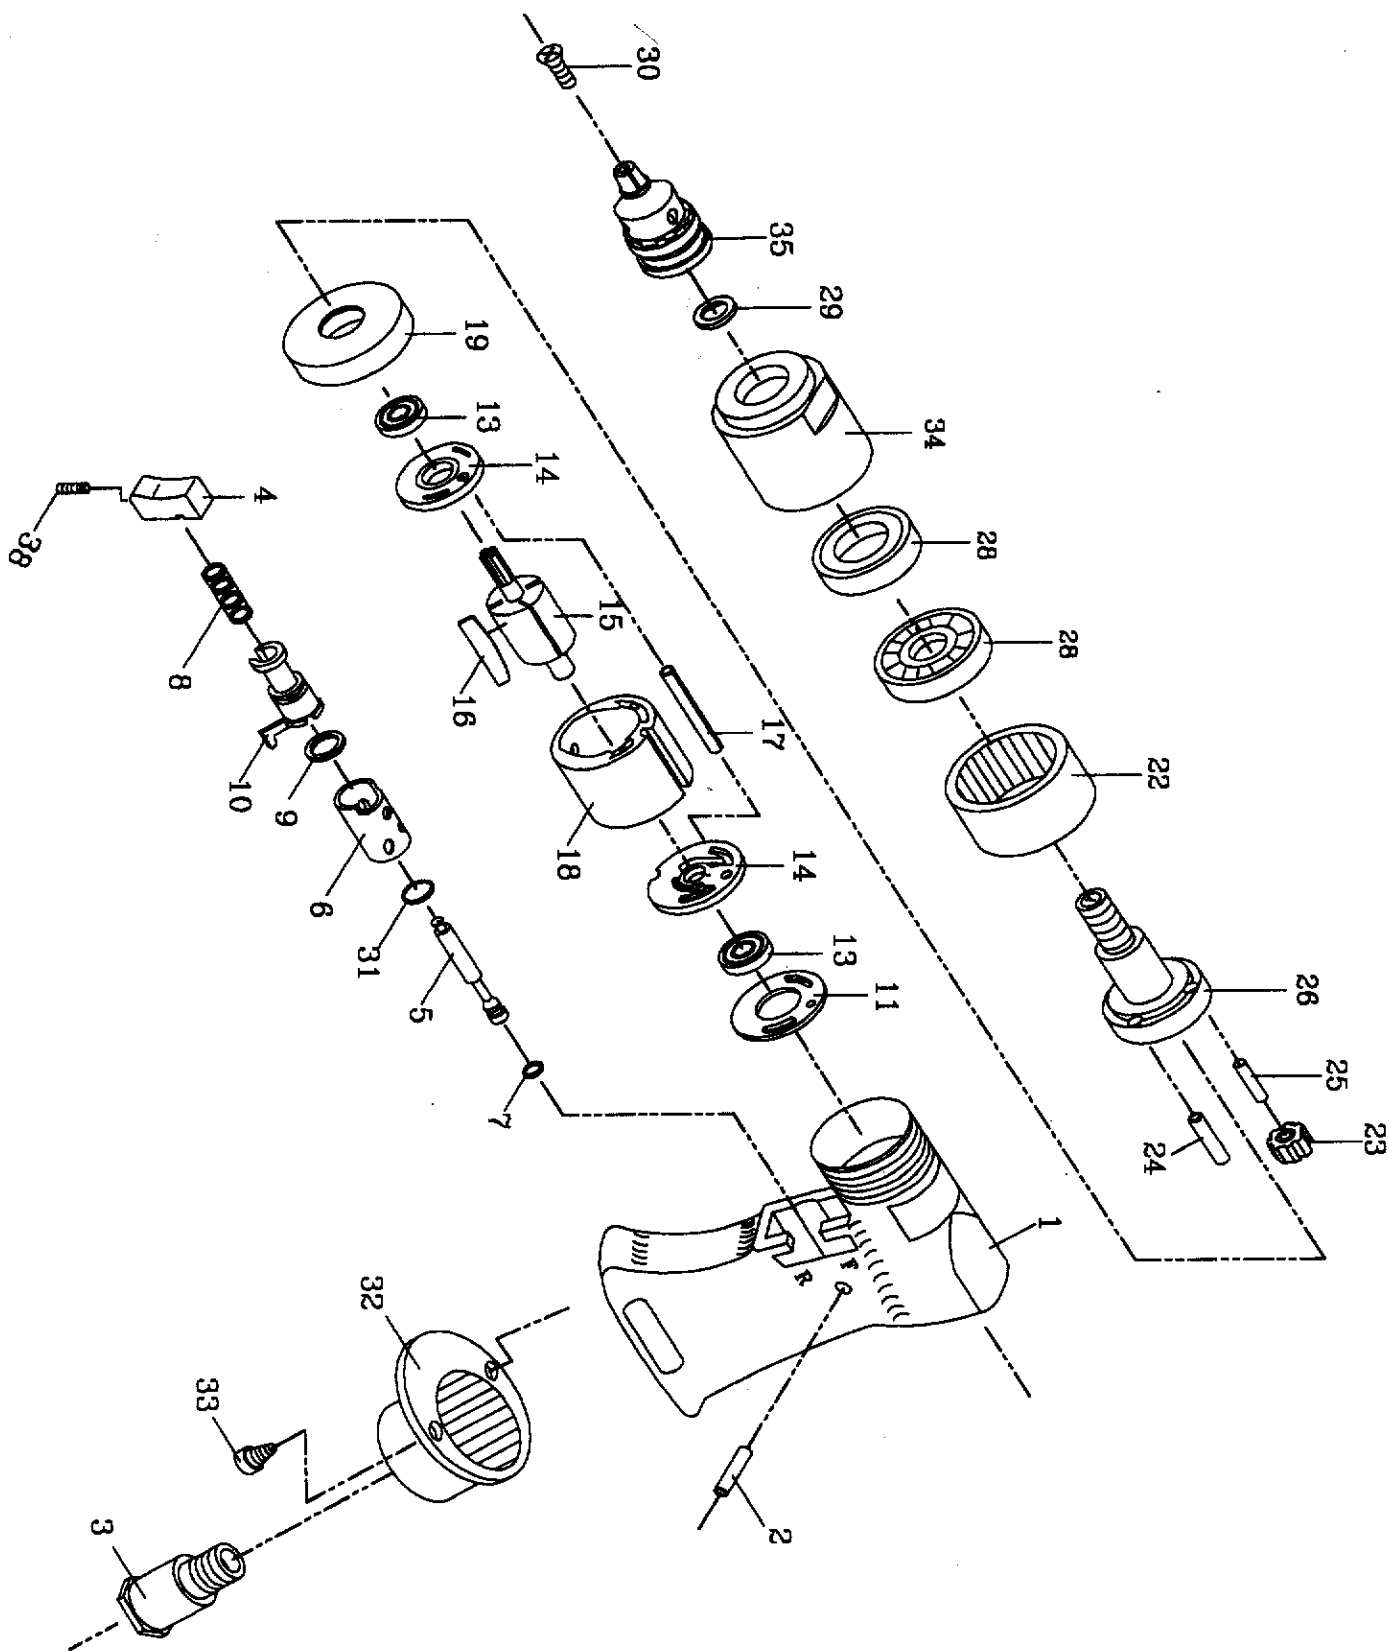

PARTS LIST

6-762

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	76201	Motor Housing	1
2	76202	Pin	1
RSY9403N 3	78803	Air Inlet	1
4	78804	Trigger	1
5	76205	Valve Stem	1
6	76206	Reverse Bushing	1
7	233A07	O-Ring	1
8	78808	Valve Spring	1
9	76209	O-Ring	1
10	76210	Reverse Lever	1
11	78711 79511	Motor Gasket	1
13	21114	Ball Bearing	2
14	78714	End Plate	2
15	76215	Rotor	1
16	78816	Rotor Blades	5
17	76217	Pin	1
18	78718	Cylinder	1
19	76219	Spacer	1
22	78822	Internal Gear	1
23	78823 79523	Planet Gear	3
24	78724	Pin COMES w/ Spindle	3
25	76225	Bushing	3
26	76226 79526	Work Spindle with pins	1
28	21118	Ball Bearing	2
29	78829	Chuck Spacer	1
30	76230	Chuck Screw	1
31	76231	O-Ring	1
32	76232	Exhaust Diffuser	1
33	76233 43007	Screw	2
34	76234 79534	Clamp Nut	1
35	87106	Drill Chuck (3/8") - Key	1
38	78638	Set Screw	1
	RS87106KK	Key only - 87106	

26
11-8-04